



02-029 SINGLE LED HARNESS INSTALLATION INSTRUCTIONS

INCLUDED:

Single LED Harness
Mounting Straps


TOOLS NEEDED: (NOT SUPPLIED)

5/8 Drill Bit
Cordless Drill

Harness




Straps

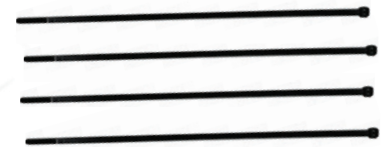

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.

Make sure cart is in TOW mode. Feed Harness down through battery compartment. If your cart is equipped with **FOUR 12V** batteries, connect the wiring harness across one battery as shown below.

If your cart is equipped with **SIX 8V** batteries, you will need a Madjax 16V to 12V voltage reducer. In this case, you will connect the voltage reducer across **TWO** of the 8V batteries, and then connect the wiring harness to the appropriate connections on the voltage reducer.

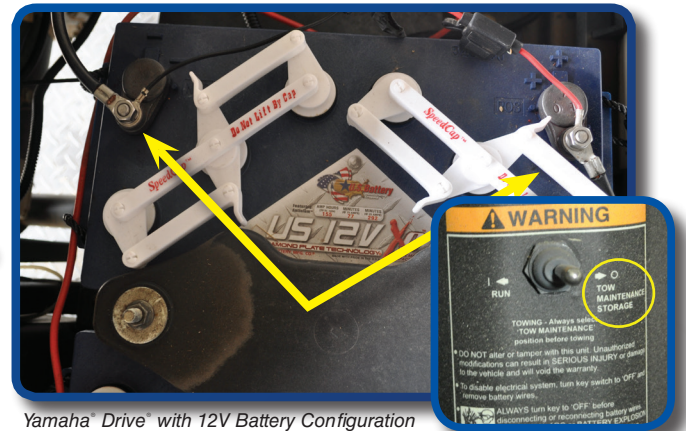

Yamaha Drive with 12V Battery Configuration



Run harness under cart securing loose wires with supplied straps to desired LED bar mounting location.


3
Attach harness to LED Light bar.



4
Using a 5/8 drill bit, drill out hole for the rocker switch. *Drill gently, insert switch and tighten nut to secure to dash.



5
Re-attach wires to Rocker Switch as shown.
Earth- Black (Ground)
Load- Blue 12V (+) Switched
Supply- Red 12V (+) Constant

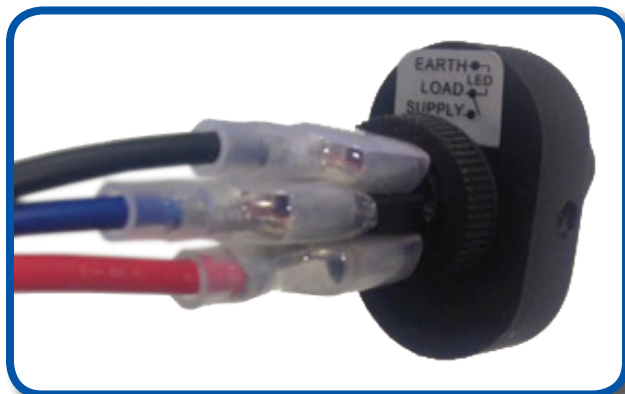

INSTALLATION COMPLETE

